

Quick start: DigitalDecorationPlayer

1. Measure your windows

To ensure that we can plan your show properly, we first need a list of all the windows that we want to include in the show. Simply use the form in the appendix. The following information is important here:

Name: *1st floor children's room*
Height: *78,0 inches*
Width: *39,0 inches*
Floor: *1st floor*
Window is floor to ceiling: *Yes*
Distances to other windows:

- *Ground floor | Downstairs | Living room window 20 inch*
- *1st floor | left | bathroom window 40 inch*



2. Create show


Start tool (overview)

Open "DigitalDecorationPlayer.com" in your browser. If you do not yet have an account, create one under "My Account". Then open the 'DigitalDecoration-Player' tool under 'Tool bench' with '>>Launch tool<<'. Here you will find Dashboard with all important functions.




Unlock videos in Media Pool

Now scroll down to "Media Pool" and use "Select files" to select all videos from AtmosFX that you want to use in your show.

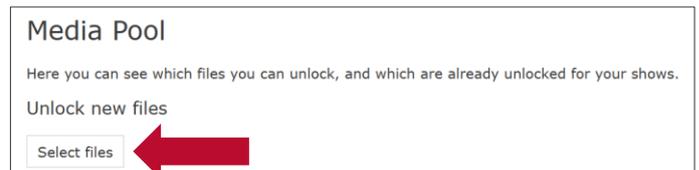


Add test contingent

Above you will find the "Stream contingent" area. Enter the voucher code "TESTPHASE10" here to receive 10 free stream hours. You can use the 'Stream Contingent Calculator' to calculate your consumption later.

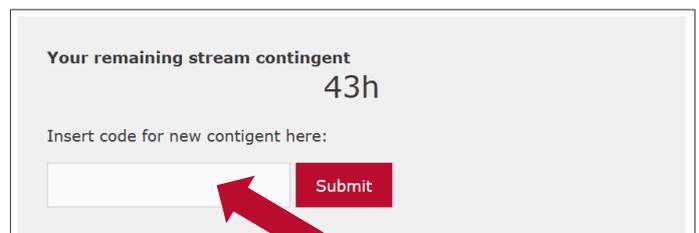


Create a show

Now we can create the show. To do this, click "Create new Show" at the top of the 'Your shows' section and give your show a name, e.g. "My Halloween". You should see your show. Now open it via "Configuration".

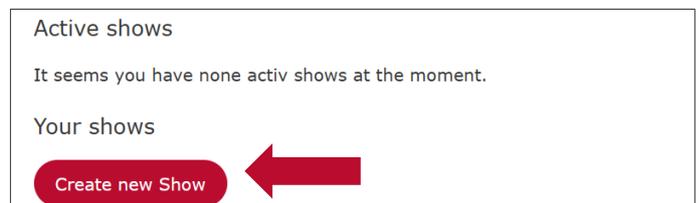

General settings

Under 'General settings' you have the option of setting whether your show can show scenes that include suicide, for example. You can also set which language the scenes (if available) should have.

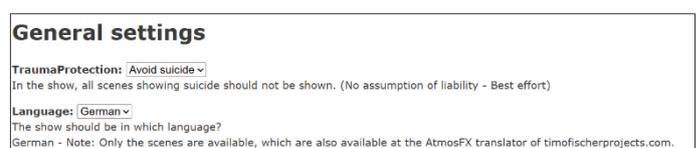

Select scenes

With "Show MediaPool for this Show" you can display the MediaPool for your show. Select all the scenes you want to show in your show and then save everything with "Save Changes".

MediaPool

Select which scenes you want to appear in your show. If you change this while the show is running, the changes will be visible in 15 minutes at the earliest.

Activ Videos: 184/210

[Hide MediaPool for this Show](#)



Bone Chillers
from AtmosFX Inc.
Unlocked Videos: 8/8
[Learn More](#)
[Buy from manufacturer¹](#)

Price (total): \$39
Price (per min): \$6.27
Duration: 00:06:13

Videos:
Mark all - Unmark all
 Boneyard Band
 Dancing Dead
 Fear the Reaper
 Gathering Ghouls



Bone Chillers 2
from AtmosFX Inc.
Unlocked Videos: 13/13
[Learn More](#)
[Buy from manufacturer¹](#)

Price (total): \$49
Price (per min): \$2.89
Duration: 00:16:57

Videos:
Mark all - Unmark all
 Ballet of Bones
 Bone Cage
 Bone Chiller Dance
 Bone Digger



Boo Crew
from AtmosFX Inc.
Unlocked Videos: 10/10
[Learn More](#)
[Buy from manufacturer¹](#)

Price (total): \$39
Price (per min): \$2.49
Duration: 00:15:38

Videos:
Mark all - Unmark all
 Boo Time
 Boos There?
 Flying Blind
 Freaky Faces

Add windows

With "Add another Player" you can now create all windows one after the other.

Player settings

[Cancel new player creation](#)

NewPlayer

General

Name:

Volume (audio):

OverLay:

Dimensions and Alignment

Projection type:

Height: m

Width: m

The projector illuminates the window from the:

Alignment of the projector image:

Select the floor for the player:

Connections

Can be created only after the creation of the player

[Add to Show](#)

"Name"	Give the window a name.
"Volume (audio)"	Here you can set the volume in advance.
"OverLay"	Here you can choose cool frames such as: Spider webs!
"Projection type"	Enter here whether the window goes all the way to the floor. This is important so that the correct version ('Hollusion' instead of 'Window') of the videos are played.
"Height"	Enter the height of the window here.
"Width"	Enter the width of the window here.
"The projector illuminates the window from the"	Specify here whether the projector is in front of ('Front') or behind ('Rear') the window from the viewer's point of view.
"Alignment of the projector image"	Here you can also specify whether you have tilted the projector by 90°.
"Select the floor for the player"	With this setting you can set the floor of the window.

Create connections

Finally, you must specify connections once for each window via "Show more settings" at the bottom via "Add a connection". To do this, imagine that you are standing in front of the house. Then specify the direction of the connection, e.g. to the right. Then select the window that lies in this direction, e.g. "1st floor left bathroom window" and enter the distance.

Connections - [Add a connection](#)

Important!: All connection descriptions/directions must be described as if you were standing in front of the house.

ID	Settings
19	Direction: <input type="text" value="Right"/> TargetPlayer: <input type="text" value="ObenMitte"/> Distance: <input type="text" value="0,28"/> m Delete
23	Direction: <input type="text" value="Bottom"/> TargetPlayer: <input type="text" value="UntenLinks"/> Distance: <input type="text" value="1,54"/> m Delete

3. Prepare windows


Now install your projection material on the windows.



4. Set up the equipment

Now place a projector at each window. We currently recommend a laptop or PC as a playback device. Small MiniPCs (from company stocks) are sometimes even available quite cheaply on e.g. ebay for \$50. With small loudspeakers, you can also transmit the sound outside.

Tip: Many of the small projectors have a mounting thread on the underside, for example. This allows you to attach the projector to a tripod, as shown in the example image, so that the image can be optimally adjusted.

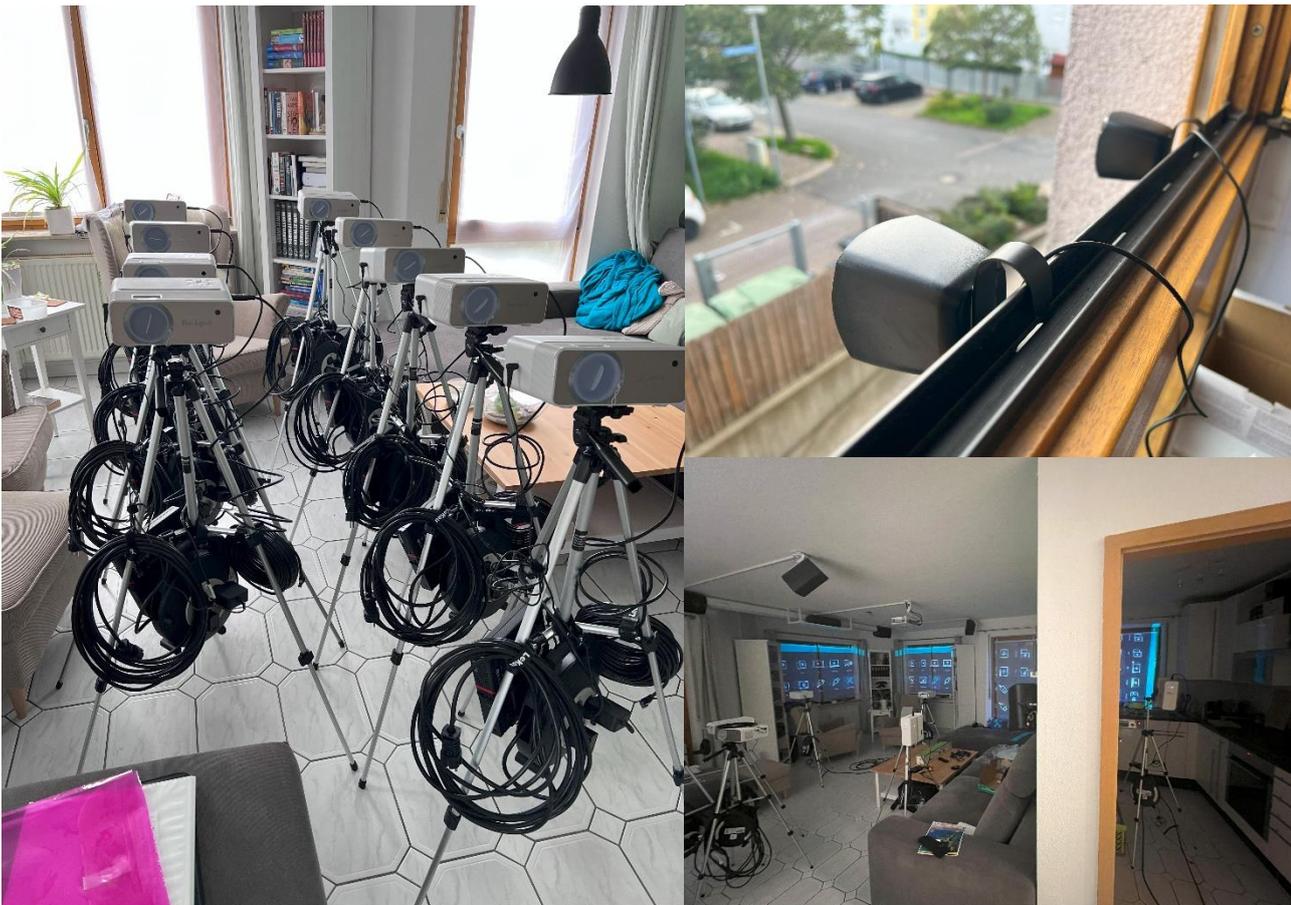

5. Start the show

Start all projectors and PCs and open the website "dd-player.com" in full screen. You may be asked to press a button. As soon as you have done this, a 6-digit letter and number code will appear. Open the website "digitaldecorationplayer.com" on your cell phone and start the tool "DigitalDecorationPlayer" ('Overview'). Here you will find a list of your windows. Click on "Connect player" and enter the 6-digit code. Your window should then start the show in the next 30 seconds!

Mein Halloween - Rename - Delete this Show ■

Typ: MultiWindow-Show
ID: 4 - Created: 2023-04-01 20:35:34 UTC
Max runtime with contingent: 7.17h

PlayerName	Status	LogInCode
ObenLinks	Inactive	Connect player AutoLogIn-Link: https://d
ObenMitte	Inactive	Connect player AutoLogIn-Link: https://d
ObenRechts	Inactive	Connect player AutoLogIn-Link: https://d
UntenLinks	Inactive	Connect player AutoLogIn-Link: https://d
UntenMitte	Inactive	Connect player AutoLogIn-Link: https://d
UntenRechts	Inactive	Connect player AutoLogIn-Link: https://d


Configuration Remote Control



6. Remote Control

You can access the remote control via the "Remote Control" button. Here you will find all the settings again, but this time in a dark mode. In this way, you can easily adjust the volume or change the window settings.

Changes that directly affect the flow of the show, such as which videos are running, whether the projector is in front of or behind the window or the connections between the windows, may take up to 15 minutes before you see the effects.

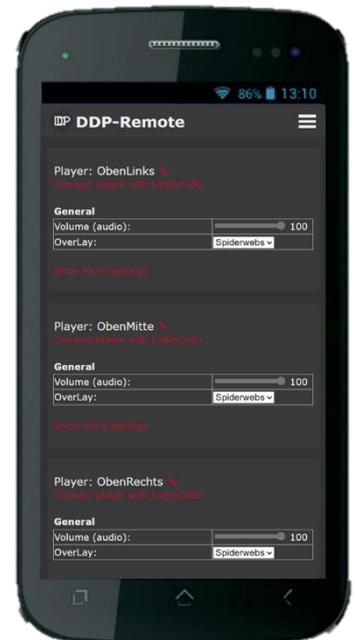

Window measurement (template)

Name			
Height			
Width			
Floor			
Window is	o floor to ceiling o normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	o floor to ceiling o normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	o floor to ceiling o normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	o floor to ceiling o normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	<input type="radio"/> floor to ceiling <input type="radio"/> normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	<input type="radio"/> floor to ceiling <input type="radio"/> normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	<input type="radio"/> floor to ceiling <input type="radio"/> normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			

Name			
Height			
Width			
Floor			
Window is	<input type="radio"/> floor to ceiling <input type="radio"/> normal		
Connection to other windows			
Direction	Floor	Name	Distance (in inch)
Left			
Right			
Top			
Bottom			